


# INSTALLATION GUIDE FB AIR TRANSFER GRILLE

## FB AIR TRANSFER GRILLE

Installation guide according to  
product documentation RISEFR 030-0311


1

Penetration prepared for installation. Min 100mm thick wall with gypsum bords or concrete wall.

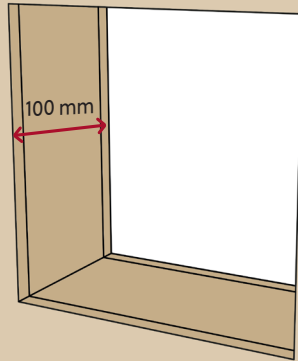


2

Pull out the brackets before installation.

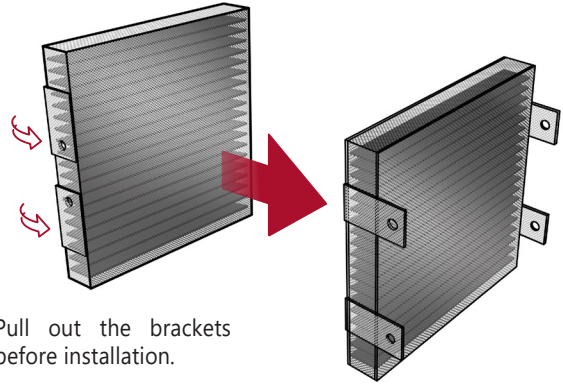


3

Center the FB Air transfer grille into the wall. The grille is designed with a 5mm clearance on all sides for the joint gap.

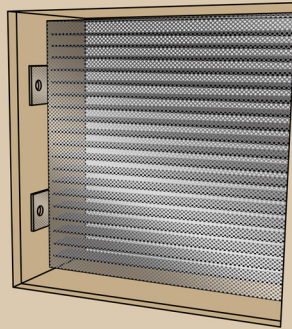


4

Use stainless screw in the brackets to fix the grille.

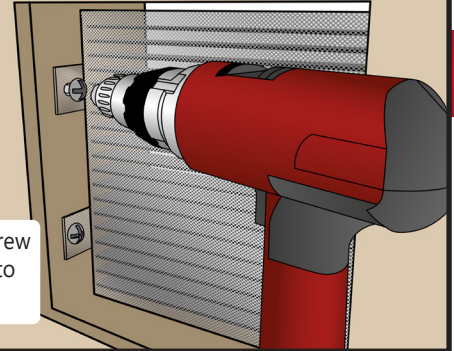

5

Use fire resistant sealant around the grille on both side of the wall.

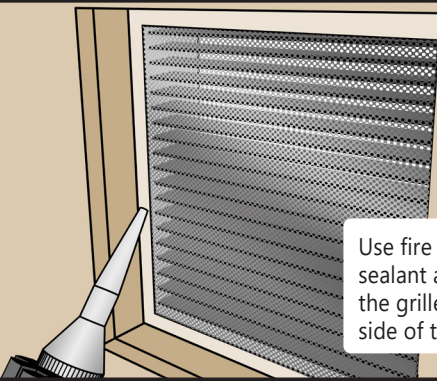

6

Approved louvers must be installed at both sides of the wall.



7

Place the approval tag visible so it's easy to see that there is a fire rated grille installed.



8

Section cut of the FB Air transfer grille installed in the wall with louvers on both sides.

